

BREEZE BOAT LIFTS

MANUFACTURED BY:
BIRR ENTERPRISES, LLC.

*WHEN ONLY THE BEST WILL DO....
IT'S A BREEZE!*

OWNER'S MANUAL

For
PWC Lift
JR-1250

BREEZE BOAT LIFTS
630 Lovejoy Road
Fort Walton Beach, FL 32548
PHONE (850) 244-4567 FAX (850) 244-1213
TOLL FREE 1-888-837-4555
BreezeBoatLifts.com

We would like to take a moment of your time to thank you for purchasing a **Breeze Boat Lift** and to inform you of some very important operating facts about your new lift. Your lift is the result of many years of research and development in Florida, where corrosion, barnacles and severe weather make lifting watercraft absolutely necessary.

We believe our Personal Watercraft (PWC) lifts are the easiest to use on the market, and that your new lift will give you many years of trouble free service if you follow the below listed instructions for use and the suggested maintenance.

Please read this manual completely through. The warning section is particularly important as failure to heed the warnings may result in damage to your watercraft or your lift and may cause serious injury or even death.

With this manual you will find the warranty registration card. **This card must be filled out and returned to us within ten (10) days of your completed installation.**

HOW TO USE YOUR NEW LIFT

1. Upon completion of the installation of your lift, the installer will adjust the bunks and guide poles to fit your PWC.
2. For shallow water installations, a reference mark (black electrical tape) can be placed on the lift cable to indicate that the lift needs to be turned off to prevent the cradle from coming into contact with the bottom. Turning the lift off before this point will prevent the cable from losing its tension and rewinding backwards in the gear plate unit. Loss of tension will potentially cause the cable to unwrap, tangle and potentially fray and become unsuitable for use. If this occurs, call a Breeze Boat Lift representative to inspect the cable. They can determine if the cable needs to be replaced or simply rewrapped. **Do not let the cradle rest on the bottom.**
3. To raise lift: Hold the switch in the “up” position; maintain the PWC’s position temporarily until the PWC is no longer floating. The PWC will normally be centered over the cradle, but it is very important to note that the Center of Gravity (CG) of the PWC, not the physical center of the PWC, will be in the center of the lift. If there is any doubt as to where the correct lifting position of your PWC is, please call your Breeze Boat Lift Dealer. Raise the PWC to the desired height on the ride pipe, but stopping as soon as the cable deadman arm is even partially in the slot on the cradle top catcher. Release the switch to the “off” position.
4. To lower PWC: Hold switch in the “down” position and allow lift cradle assembly to sink into the water deep enough for the PWC to float. Release switch to “off” position.
5. To rotate PWC: Unplug the lift before rotating! The lift can be rotated in either direction. **Warning: Failure to unplug the lift prior to rotating may allow the cord to get caught in the lift causing damage to the lift or electrical shock hazard with potential injury**
6. Unplug the lift whenever it is not in use. This will minimize both the significant corrosive effects of electrolysis and the potential for damage due to lightning strikes, as well as eliminate the chance for accidental operation of the lift.
7. If a Remote Control has been installed with your lift, the On/Off Switch must be set to Off (or the Remote unplugged) when the lift is not in use.
8. Long Term Storage: The PWC can be kept over the water or over the dock, but in either case the PWC should be parallel to the edge of the dock. Lowering the cradle down slightly, so the bottom wheels are resting on the square portion of the ride pipe, will prevent the lift from inadvertently rotating.

Warnings – Please read carefully. Call Customer Service (1-850-244-4567 or 1-888-837-4555) if you have any questions!

Failure to heed the warnings may result in damage to your PWC or your lift and may cause serious injury or even death.

This lift is not a toy, it is a heavy duty machine designed for lifting significant weight. Never allow children or judgment-impaired adults to operate the lift.

Do not allow yourself to be distracted during operation of the lift. Failure to shut off lift can result in major damage to the lift, PWC or both. Keep hands and clothing away from moving parts.

Never overload the lift. The maximum lift capacity is the rated lift capacity as stated on the Purchase Order / Contract.

The lift is not designed for lifting human beings and no person should be under the PWC while in the suspended position.

LUBRICATION AND PREVENTIVE MAINTENANCE SCHEDULE

With every use:

- ◆ Inspect the lifting cable for wear or fray
- ◆ Listen for unusual noise (this is normally the first indication of a pending malfunction)

Every month:

- ◆ Exercise the lift if it has not been run within the last few weeks. Run the lift both down & up for 1-2 minutes. Unplug the lift when finished

Every two months:

- ◆ Inspect the gear drive and grease the 2 fittings on the gear plate, if necessary

Every six months:

- ◆ Spray all motor parts with a corrosion preventative lubricant
- ◆ Spray cables with a penetrating marine lubricant

Every five years:

- ◆ Replace the Stainless Steel lifting cable. Note: Replace cable sooner if any evidence of cable fray is found.

Note - Adjustments by personnel other than an authorized dealer will void the warranty and may result in serious damage and/or personal injury

LIMITED WARRANTY

The manufacturer, Breeze Boat Lifts, hereby warrants the following items from the date of purchase to the original PURCHASER of this boat lift at the original address as specified on the order form/purchase contract:

- ◆ For Top Mount and Side Mount boat lifts - The structural integrity of the cradle beams and top beams for a period of TEN YEARS
- ◆ For Single and Double Motor Boathouse boat lifts - The structural integrity of the cradle beams, drive pipe hangars and snatchblocks for a period of TEN YEARS
- ◆ For Vertical Elevator and Junior (single piling) boat/PWC lifts - The structural integrity of the cradle and ride pipe for a period of FIVE YEARS
- ◆ For all lifts - the product shall be free from defects in material or workmanship for a period of ONE YEAR
- ◆ The Hefty Hoist Gear Unit is warranted for FIVE YEARS and the motor is warranted for ONE YEAR.

BREEZE BOAT LIFTS agrees to provide all necessary parts and materials to correct any such defects providing written notice is received by **Breeze Boat Lifts** within the warranty period (email address is admin@breezeboatlifts.com). The purchaser remedy is limited to repair or replacement of the defective part and in no event shall any purchaser be entitled to any incidental or consequential damages to the boat, lift pilings, dock, or seawall. Any implied warranties shall be limited to the duration of this limited warranty. The manufacture’s address for receipt of notice is:

**ROCKY BAYOU ENTERPRISES, INC.
D/B/A Breeze Boat Lifts
630 Lovejoy Road
Fort Walton Beach, FL 32548**

These warranties shall be deemed void and unenforceable and the equipment shall be deemed sold “AS IS” and “WITH ALL FAULTS”, with the entire risk as to quality and performance to be borne by the original purchaser without any implied warranties of fitness or merchantability **if any of the following should occur:**

- A. If the equipment should be installed at any location other than the original purchaser’s installation address specified in the purchase order/sales agreement;
- B. If the equipment shall be used in any commercial fashion or other than in accordance with the recommendations contained in the operators manual provided to the original purchaser;
- C. If any one not authorized by **Breeze Boat Lifts** attempts to make any repairs, to replace any of its component parts, or otherwise alter the equipment.
- D. The load on the boat/PWC lift exceeds the stated capacity of the purchased lift.

Lift malfunctions or failure due to corrosion, faulty dock electrical system, adverse weather conditions, acts of God or any reason not due to a defect in materials and/or workmanship of the equipment are not covered.

Breeze Boat Lifts shall not be responsible for incidental or consequential damages, including, but not limited to property damage, loss of use, expenses for inconvenience, or loss of profit.

NOTE: Some states do not allow the exclusion or limitations of incidental or consequential damages so the above limitation or exclusion may not apply to you.

Other than set forth above, the company makes no express or implied warranty (including implied warranties of merchantability and fitness) relating to the product.

----- Cut here -----

WARRANTY REGISTRATION

Full Name _____

Address _____

Installation Address (if different) _____

City _____ State _____ Zip _____

Work Phone _____ Home Phone _____

Installed By _____ Date Installed _____

Lift Model # _____

The warranty registration form must be completed in full and returned to the manufacturer within (10) days from date of completed installation.

I have read the information in this manual and understand the use of my lift and all precautions to be taken.

Signature _____ Date _____